

Installation, Operation and Maintenance Technical Manual

TRI-STAT

CO₂, Relative Humidity and Temperature Sensor for RS-485 BACnet[®] and Modbus[®] RTU Applications

Model: TRS-0100
Tri-Stat Part number: 410-5300

Document: TM_TRI-STAT_R1E



TM_TRI-STAT_R1E



BACnet is a registered trademark of ASHRAE. ASHRAE does not endorse, approve or test products for compliance with ASHRAE standards. Compliance of listed products to the requirements of ASHRAE Standard 135 is the responsibility of BACnet International (BI). BTL is a registered trademark of BI.

LIST OF EFFECTIVE AND CHANGED PAGES

Insert latest changed pages (in bold text); remove and dispose of superseded pages.
Total number of pages in this manual is **22**.

Page	Rev *	Description of Change	Date	Page	Rev *	Description of Change	Date
1	.R1E	Updated Title page revision	.03/05/2010	12	.R1C	Added clarification for local and remote baud rate selection capability	.12/08/2009
2	.R1E	Updated List of Effective Pages	.03/05/2010	16, 18	.R1C	Removed BACnet Notification Class Object	.12/08/2009
16, 17	.R1E	Firmware change: Prior AV3 object renamed to AI4 object in Table 2; renumbered AV4-12 objects to AV3-11 in Table 3	.03/05/2010	1	.R1B	Changed document part number from 930-0170 to 930-0180	.08/25/2009
6, 8, 9	R1D	Added CAUTION notes for applications where multiple devices are powered by a common 24VAC power source	.01/19/2010	1-22	.R1A	Initial Document Release	.07/24/2009

* R1A indicates an original page without change

Table of Contents

OVERVIEW	3	TRI-STAT MAINTENANCE	14
ADVANCED TECHNOLOGY	3	BACnet [®] CO2 Sensor Calibration	14
SPECIFICATIONS	4	Modbus [®] CO2 Sensor Calibration	15
ORDERING GUIDE	4	BACnet [®] NETWORK DEVICE OPERATING PARAMETERS	15
TRI-STAT PLACEMENT CONSIDERATIONS	5	MODBUS [®] NETWORK DEVICE OPERATING PARAMETERS	15
TRI-STAT INSTALLATION	6	TRI-STAT STANDARD LIMITED PARTS WARRANTY	15
TRI-STAT INTERCONNECTIONS	8	APPENDIX A - BACnet [®] NETWORK DEVICE	
TRI-STAT SET UP	10	OPERATING PARAMETERS	16
TRI-STAT BACnet [®] CONFIGURATION	10	TRI-STAT BACNET [®] OVERVIEW	16
J1 - Tri-Stat RS485 Network Termination Selection	10	BACnet [®] Device Object	16
Setting Tri-Stat Time	10	BACnet [®] Analog Input (AI) Objects	16
SW1 - Tri-Stat Configuration DIP Switch Settings	10	BACnet [®] Analog Value Objects	17
Setting the MAC Address	11	BACnet [®] Binary Value Objects	18
Changing BACnet [®] Device Object Instance Number	11	BACnet [®] Notification Class Object	18
Setting the MS/TP Baud Rate	12	APPENDIX B - MODBUS [®] NETWORK DEVICE	
Restoring Factory Default Settings	12	OPERATING PARAMETERS	19
TRI-STAT MODBUS [®] CONFIGURATION	13	Tri-Stat Modbus [®] Register Overview	19
TRI-STAT START-UP	13	Modbus [®] 4-Byte Floats - Read Only Properties	19
TRI-STAT NORMAL OPERATION	13	Modbus [®] 4-Byte Floats - Read/Write Properties	20
		Modbus [®] 2-Byte Registers - Read/Write Properties	21

List of Figures

Figure 1. EBTRON Tri-Stat - CO ₂ /RH/Temperature Wall Mount BACnet/Modbus RTU Sensor	3
Figure 2. Tri-Stat Outline Dimensions	5
Figure 3. Marking Locations for Installation	7
Figure 4. Tri-Stat Typical Wiring Diagram to BAS Control Interface	8
Figure 5. Tri-Stat Interior Detail View	9
Figure 6. SW1 - Configuration DIP Switch Detail View	11
Figure 7. MAC Address Selection Settings	11
Figure 8. Baud Rate Selection Settings	12
Figure 9. Tri-Stat CO ₂ Calibration Ports	15

List of Tables

Table A1. BACnet [®] Device Object	16
Table A2. BACnet [®] Analog Input (AI) Objects	16
Table A3. BACnet [®] Analog Value Objects	17
Table A4. BACnet [®] Binary Value Objects	18
Table A5. BACnet [®] Notification Class Object	18
Table B1. Tri-Stat Supported Standard Modbus Command Functions	19
Table B2. Modbus 4-Byte Floats - Read-Only Properties	19
Table B3. Modbus 4-Byte Floats - Read/Write Properties	20
Table B4. Modbus 2-Byte Registers - Read/Write Properties	21

TM TRI-STAT_R1E

Copyright[®] 2009, EBTRON[®], Inc.

All brand names, trademarks and registered trademarks are the property of their respective owners. Information contained within this document is subject to change without notice. Visit EBTRON.com to view and/or download the most recent versions of this and other documents.

All rights reserved.



Figure 1. EBTRON Tri-Stat - CO₂/RH/Temperature Wall Mount BACnet[®]/Modbus[®] RTU Sensor

OVERVIEW

EBTRON's Tri-Stat is an innovative wall mount CO₂/relative humidity (RH)/temperature sensor that provides precision measurement and BACnet[®] MS/TP or Modbus[®] RTU communications interface in a single device packaged for interoperability with modern building automation systems (BAS). It is ideal for maintenance of IAQ in variable occupancy spaces where direct occupant counting is not well suited. The Tri-Stat, EBTRON model TRS-0100 is key in the acquisition of LEED^{®1} credit points for densely occupied spaces to satisfy the Ventilation Rate Procedure (VRP) of ASHRAE^{®2} Standard 62.1-2007, and in reducing overall energy consumption.

At the heart of the Tri-Stat is EBTRON's proprietary microcontroller based sensor package featuring a patented, extremely stable CO₂ measurement system that requires no maintenance or calibration during its normal service life. The patented self-calibration feature virtually eliminates manual calibration in applications where indoor CO₂ levels drop to normal outdoor background levels during unoccupied periods (e.g. during evening hours).

The integral RS-485 BACnet[®] MS/TP and Modbus[®] RTU compatible communications interface includes options for setting address, device instance and baud rate. Coupled with complementary precision relative humidity and temperature sensors, the Tri-Stat provides an economical, simple and intelligent alternative to harnessing and coordinating the network operation of individual CO₂, humidity and temperature sensor devices.

Simple field configuration is accomplished by DIP switches on the main circuit board and via the BACnet[®] and Modbus[®] RTU interface.

ADVANCED TECHNOLOGY

- Single BACnet[®]/Modbus[®] RTU device features integrated complement of precision sensing elements for CO₂, RH and Temperature measurement.
- Continuous CO₂ self-calibration feature eliminates routine maintenance.
- Integral RS-485 BACnet[®] MS/TP and Modbus[®] RTU interface for interoperability with common BAS devices.
- Microprocessor-based electronics with industrial grade integrated circuits.
- Convenient DIP switch user interface for simple field configuration.

Network Connectivity Solutions



Modbus[®]

¹ LEED[®]: Leadership in Energy and Environmental Design - a Green Building Rating System that is a nationally accepted benchmark for the design, construction, and operation of high performance "green" buildings.

²ASHRAE[®]: American Society of Heating, Refrigerating and Air Conditioning Engineers - an international technical society for heating, ventilation, air-conditioning, and refrigeration.

SPECIFICATIONS

Sensor Complement

- Advanced precision sensing elements for CO₂, relative humidity and temperature measurement via RS-485 BACnet[®] MS/TP and Modbus[®] RTU communication interface

CO₂ Sensor Performance

- Technology: Non Dispersive Infrared (NDIR), gold plated optics, diffusion sampling with patented self-calibration algorithm)
- CO₂ Range: 400-2,000 ppm (factory default)
Adjustable to 10,000 ppm
- CO₂ Accuracy: 500ppm ±35ppm
800ppm ±60ppm
1000ppm ±75ppm
1200ppm ±90ppm
- *Accuracy shown at 77 °F (25 °C)
- CO₂ Stability: <2% of FS over life of sensor
(15 years typical)

Relative Humidity Sensor Performance

- Technology: Planar Capacitive Polymer
- RH Range: 0 to 100% RH, non condensing
- RH Accuracy: ±2% @ 20% to 80% RH, 77 °F (25 °C)
±3%: <20% to >80% RH, 77 °F (25 °C)
- RH Resolution: 0.4% RH

Temperature Sensor Performance

- Technology: Integral band gap PTAT
- Range: -58 °F to 302 °F (-50 °C to 150 °C)
- Accuracy: ±1.08 °F at 77 °F (±0.6 °C at 25 °C)
- Resolution: 0.36 °F (0.2 °C)

Signal Processing: Microprocessor-based

Power Supply Performance

- Technology: Integral power supply powered by external 24 VAC (22.8-26.4VAC), 50/60 Hz source.
- Brownout Watchdog protection reset circuit
- Overvoltage, overcurrent, and surge protection

Enclosure

- Attractive low profile wall mount enclosure compatible with standard single-gang electrical box, and surface mount applications.

Dimensions

- 5.25 x 3 x 1.18 in (133.35 x 76.2 x 29.97 mm)

User Interface

- Simple DIP switch selection

Output to Host Controls

- RS-485 BACnet[®] MS/TP or Modbus[®] RTU
- Baud rate: Selectable 76,800, 38,400, 19,200, 9,600
Default: RS-485 BACnet[®] MS/TP 76,800
Default: Modbus[®] RTU: 19,200

System Diagnostics

- On board LED status indicator

Environmental Limits

- Operating Temperature: 32 ° F to 122 ° F
(0 ° C to 50 ° C)
- Moisture: 0 to 95% RH, noncondensing

Limited Warranty

- 36 months from shipment (1 year for CO₂ module) - refer to **EBTRON** Standard Terms and Conditions of Sale" for complete warranty information.

ORDERING GUIDE

When ordering the Tri-Stat, simply specify the "Tri-Stat". You may also order the Tri-Stat by model number TRS-0100 or by EBTRON part number 410-5300.

TRI-STAT PLACEMENT CONSIDERATIONS

Figure 2 details the mechanical outline dimensions of the Tri-Stat. The Tri-Stat sensor location selected is important to ensure accurate readings that are representative of the area to be monitored. Preferred mounting locations are:

- On an interior wall that has no direct sunlight exposure and is near (but not directly in the airstream of) a return air duct. In areas with multiple return air ducts, locate the sensor at a point between them, observing the same precautions. Avoid areas with poor air circulation, such as behind doors or in alcoves where temperature fluctuations and moisture accumulation can affect sensor performance. Also, avoid areas that may exposed the Tri-Stat to direct occupant breathing (e.g. water coolers, coffee machines, etc.).
- At a height of 4 to 6 feet from floor level, and at least 3 ft from a corner and 2 ft from an open doorway.
- Away from the direct airflow of windows, doorways, halls or other heating and cooling sources.
- Away from other equipment that could affect the temperature of the sensor.

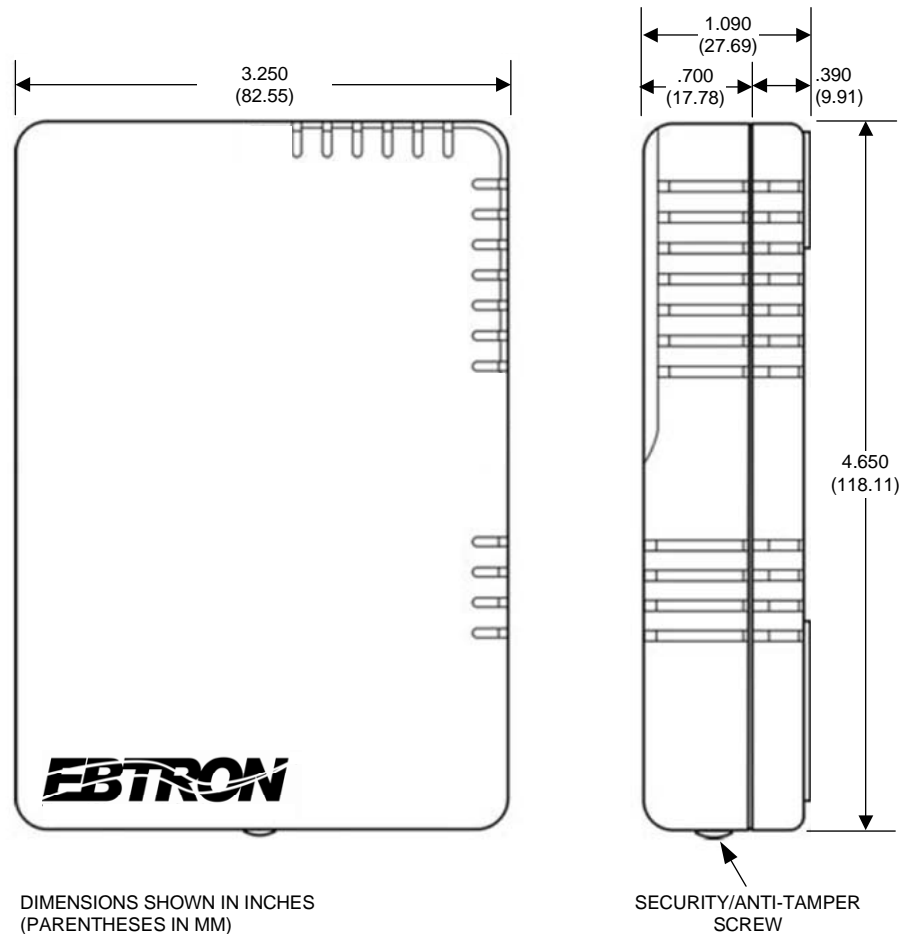


Figure 2. Tri-Stat Outline Dimensions

TRI-STAT INSTALLATION

Read and understand all installation instructions prior to installing the Tri-Stat. The Tri-Stat is designed for surface mount or installation, or for installation onto a standard (field supplied) single gang electrical junction box. Installation and wiring of the Tri-Stat must be accomplished in accordance with all local electrical and mechanical codes to ensure safety and compliance. Refer to Figure 2 for Tri-Stat outline dimensions, and Figure 3 for mounting hole locations.

CAUTION



Deactivate 24 VAC power source until all connections to the Tri-Stat are complete.



When multiple devices are powered from a common 24VAC power source, ensure that all devices are wired in phase with 24VAC power at L1, and 24VAC return at L2! Damage will occur to the Tri-Stat and/or other devices if this caution is not observed.



The Tri-Stat contains electrostatic discharge (ESD) sensitive components. To prevent damage, observe ESD precautions when handling the instrument. Failure to comply can result in equipment damage.



The installed location of the Tri-Stat is critical for proper performance. Refer to the previous TRI-STAT PLACEMENT CONSIDERATIONS section of this document for additional recommendations.



Ensure that adequate clearance exists to permit installation and wiring of the Tri-Stat, and to allow for access to the board mounted instrument configuration switches.

1. Carefully open the Tri-Stat package and inspect for damage. If any damage is noted, immediately file a claim with carrier.
2. Determine the Tri-Stat installation location as indicated on the engineer's plans, or determine placement using the previous guidelines.
3. Install Tri-Stat wiring to the desired location, observing the previous placement considerations. Wiring may be routed directly through walls for surface mounting of the Tri-Stat, or may be brought through a junction box depending upon local requirements. All wiring must be accomplished in accordance with local regulations and national codes.
4. Carefully remove the cover of the Tri-Stat. Depress the enclosure tab at the bottom of the enclosure, and swing the cover upward to disengage it from the base. The Tri-Stat includes two mounting screws for standard electrical junction box installations, and one security/tamper resistant screw. After Tri-Stat installation and configuration is complete, this screw may be installed at the bottom of the enclosure to prevent inadvertent or unauthorized opening of the enclosure.
5. Using the Tri-Stat base as a template, mark the location for the wiring pass-through slot and for the mounting screws as shown in Figure 3. For mounting directly to a single-gang electrical junction box, proceed to step 8.
6. Drill holes sized for suitable wall anchors at the mounting locations marked, and install the wall anchors.
7. Drill another hole suitable to pass the Tri-Stat wiring through the wall at the marked wiring pass-through slot location. Pull wiring through hole, and allow 6 inches for wiring of the Tri-Stat.
8. Pass Tri-Stat wiring through the rear pass-through opening of the Tri-Stat base and mount the instrument at the desired location using appropriate hardware for the mounting method selected. Refer to the proceeding sections of this document for initial instrument set up and normal operation.

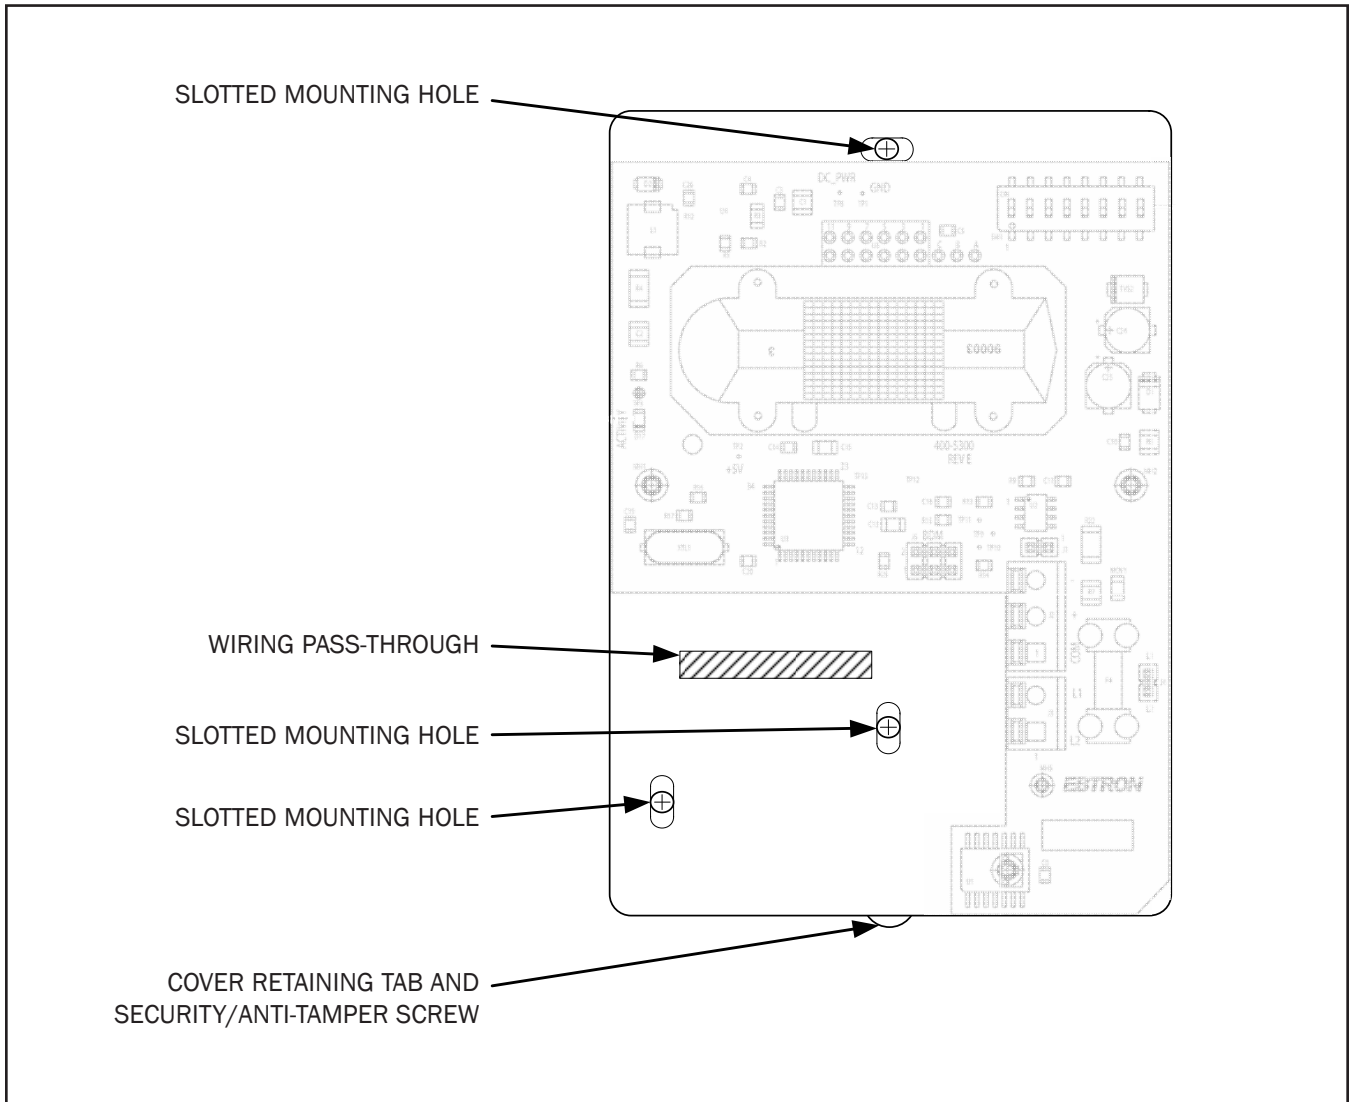





Figure 3. Marking Locations for Installation

TM_TRI-STAT_R1A

TRI-STAT INTERCONNECTIONS

CAUTION

-  Deactivate 24 VAC power source until all connections to the Tri-Stat are complete.
-  When multiple devices are powered from a common 24VAC power source, ensure that all devices are wired in phase with 24VAC power at L1, and 24VAC return at L2! Damage will occur to the Tri-Stat and/or other devices if this caution is not observed.
-  The Tri-Stat contains electrostatic discharge (ESD) sensitive components. Observe ESD precautions when handling the instrument to prevent damage. Failure to comply can result in equipment damage.

All connections are accomplished on the Tri-Stat circuit board at terminal blocks J2 and J3 as shown in Figures 4 and 5.

1. Connect 24VAC power to the Tri-Stat at terminal block J3 terminals L1 and L2. When powering multiple network devices from a common source, observe 24VAC phasing (24VAC to L1, return at L2 - see Caution above).
2. The L2 post of the 24VAC J3 terminal block can be connected to earth ground according to the following:

CAUTION

Damage to network devices may occur if L2 of the 24VAC J3 terminal block is connected to earth ground and the RS485 network is not earth grounded.

- a) If the RS485 network connection for the Tri-Stat is ground referenced to earth, the L2 post of the 24VAC J3 terminal block can also be connected to a wire that is ground referenced to earth.
 - b) If the RS485 network connection for the Tri-Stat is not ground referenced to earth, then the L2 post of the 24VAC J3 terminal block must not be connected to a wire ground referenced to earth, as damage to other network devices may occur.
3. Connect the RS485 network connections at terminal block J2 as follows:

J2 Terminal Block	Network Connection
-	NET -
+	NET +
COM	NETWORK COMMON

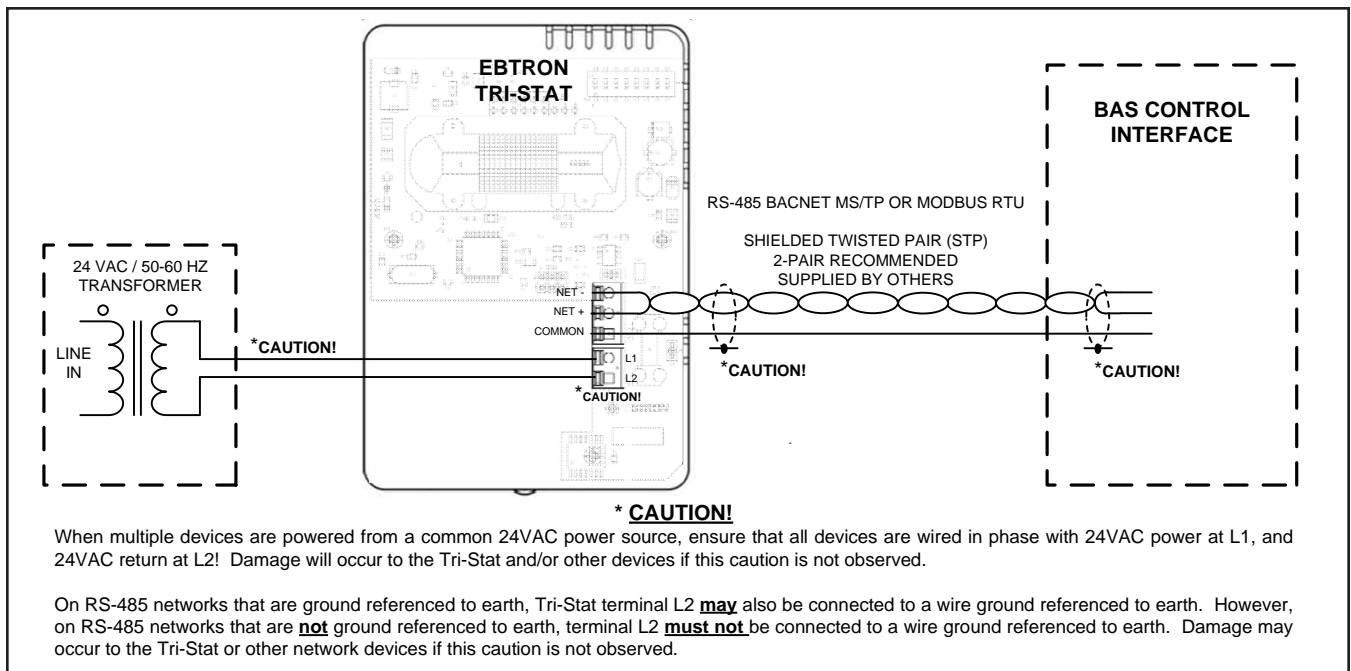


Figure 4. Tri-Stat Typical Wiring Diagram to BAS Control Interface

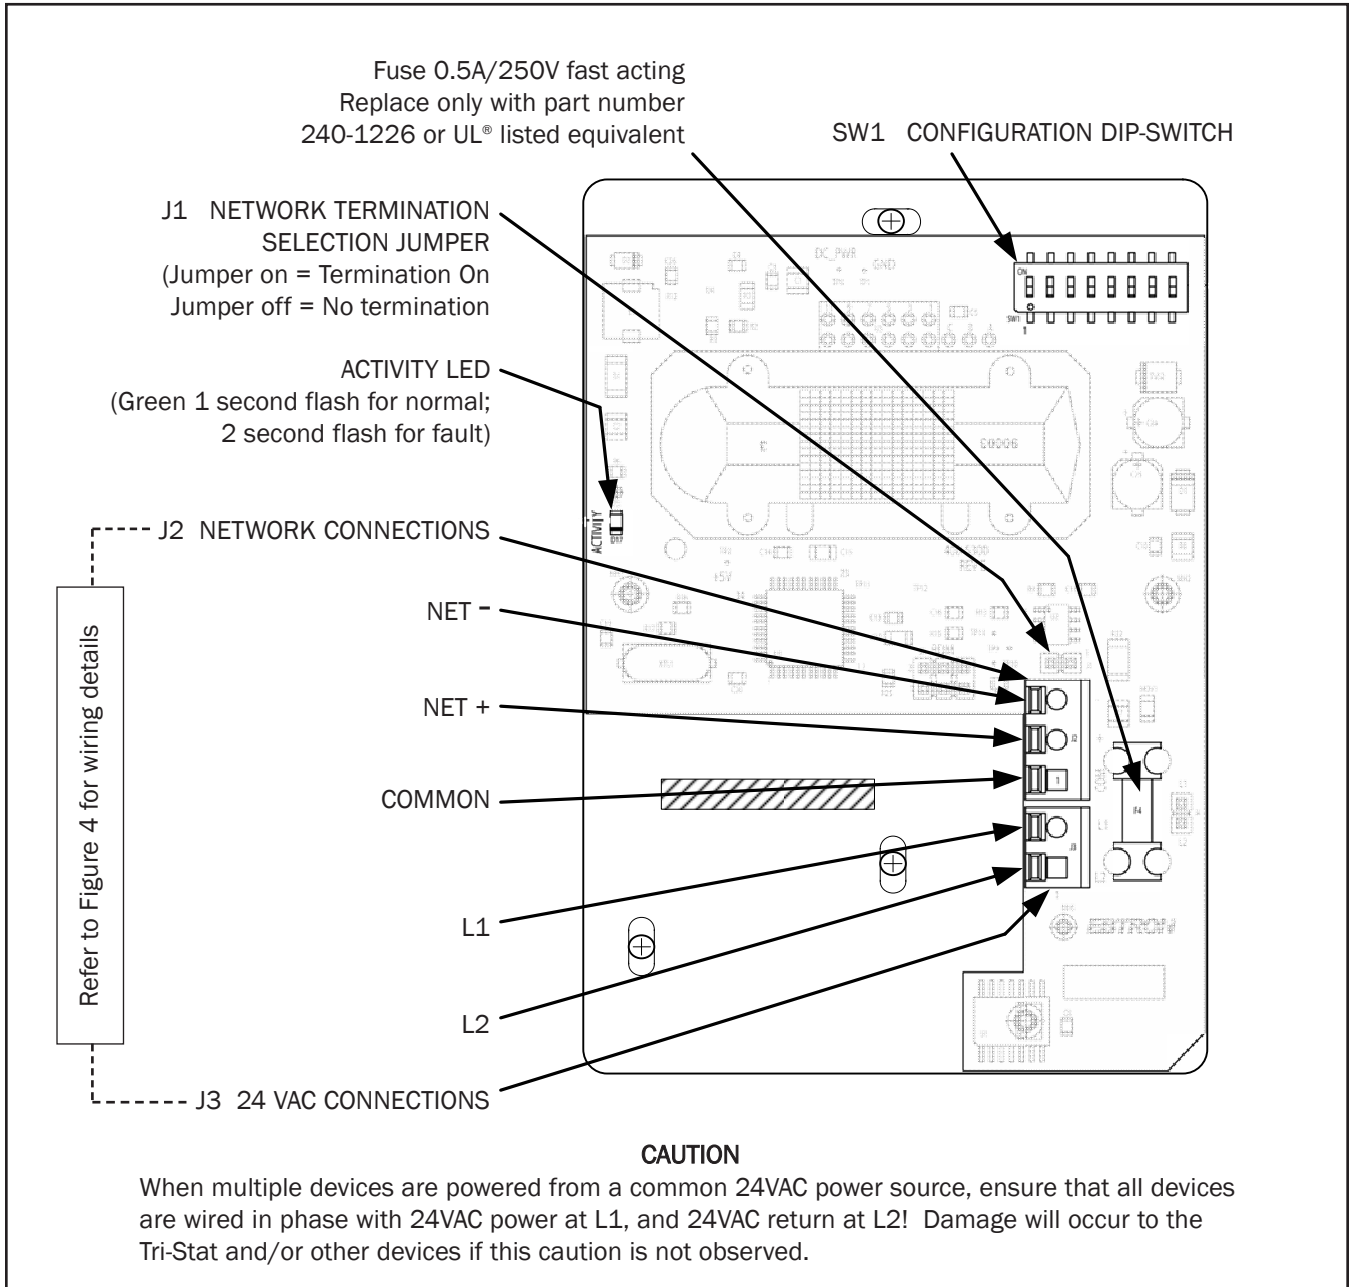


Figure 5. Tri-Stat Interior Detail View

TRI-STAT SET UP

The Tri-Stat is shipped from the factory for BACnet[®] operation. If Modbus[®] operation is desired, proceed to the **TRI-STAT MODBUS[®] CONFIGURATION** section of this document.

TRI-STAT BACnet[®] CONFIGURATION

The following paragraphs detail the initial set up instructions for the Tri-Stat when using a BACnet[®] device operation. Refer to Appendix A - Tri-Stat BACnet[®] Device Operating Parameters for additional detail.

J1 - Tri-Stat RS485 Network Termination Selection

The Tri-Stat includes a network termination selection jumper at J1 (shown in Figure 4) to permit device installation at any point on an RS-485 network. When the Tri-Stat is located at either end of an RS-485 network or segment, it is recommended that the jumper at J1 be installed across both pins of J1. When the Tri-Stat is located at any other point on the RS-485 network, no termination is recommended, and the jumper should not be installed across J1.

Setting Tri-Stat Time

The internal Tri-Stat clock must be set prior to placing the instrument in operation, or in the event of loss of power to the instrument. The Tri-Stat clock is used to establish the lowest CO₂ level.

Note:

When initially powered on (or following an interruption of 24 VAC power), the Tri-Stat internal time is set at 00:00:00 (midnight). The Tri-Stat will begin recording CO₂ PPM levels based on a 24-hour period starting at 00:00:00 and ending at 23:59:59. In order for the CO₂ sensor to record CO₂ levels accurately, the correct time must be entered.

The Tri-Stat time setting must be re-synchronized with the network following a power loss or interruption. For BACnet[®] applications, a timesync command (see Appendix A) must be sent to the Tri-Stat using appropriate network software. For Modbus[®] applications, the current time (in hours and minutes) must be reset using appropriate network software at registers 30025 and 30026 respectively (see Appendix B).

SW1 - Tri-Stat Configuration DIP Switch Settings

The configuration DIP switch contains eight separate dual-position switches in a dual inline package (DIP) as shown in Figures 5 and 6. These switches allow for setting the following Tri-Stat network parameters:

- Setting the MAC Address/Slave ID - using Switches 1 through 7
- Setting BACnet[®] Device Object Instance Number (if the same as the MAC Address) - using Switch 8
- Setting BACnet[®] Baud Rate - using Switches 1 through 4
- Restoring Defaults - using Switches 1-8
- Enabling Modbus[®] network operation - using Switches 1 through 4
- Performing CO₂ Calibration - using Switches 1-8

NOTE:

Prior to initializing the Tri-Stat, the MAC address and the baud rate parameters must be assigned.

The following paragraphs provide detail for setting the network parameters using Configuration DIP Switch SW1.

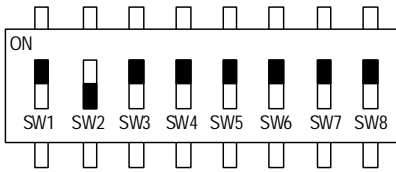


Figure 6. SW1 - Configuration DIP Switch Detail View

Setting the MAC Address

The default Tri-Stat MAC Address is set at the factory for a value of 2. If it is necessary to change the MAC address use switches 1 through 7 of SW1 to set the MAC Address to set any network address between 1 and 127 as follows:

1. Deactivate 24VAC power to the Tri-Stat.
2. Set SW1 switches 1-7 to the desired address as shown in Figure 7. Record the new MAC address value for future reference.
3. Reapply 24VAC power to the Tri-Stat. After a short delay (approximately 20 seconds) the new MAC address is now active.

MAC ADDRESS SETTINGS

SW1 DIP Switches 1-7

DIP Switch Number and Position								Network Address
1	2	3	4	5	6	7	8	
off	off	off	off	off	off	off	off	0
on	off	off	off	off	off	off	off	1
off	on	off	off	off	off	off	off	2
on	on	off	off	off	off	off	off	3
↓	↓	↓	↓	↓	↓	↓	off	↓
on	on	on	on	on	on	on	off	127

Only SW1 Switches 1 through 7 are used to set the MAC Address - See text for detail.

Figure 7. MAC Address Selection Settings

NOTE:

When Tri-Stat configuration is completed, confirm that the new MAC address has been set correctly using appropriate BACnet[®] software

Changing BACnet[®] Device Object Instance Number

The BACnet[®] Device Object Instance Number is set at the factory to match the factory default address of 2. If necessary, the BACnet[®] Device Object Instance Number can be set to match the assigned MAC address as follows:

1. Deactivate 24VAC power to the Tri-Stat.
2. Slide DIP Switch 8 to the ON position.
3. Restore 24VAC power to the Tri-Stat. Allow a short delay (approximately 20 seconds) for the new BACnet[®] Device Object Instance Number to be recognized.
4. Restore DIP Switch 8 to the OFF position.

The BACnet[®] Device Object Instance Number can also be set to another value that does not match the MAC address by using suitable BACnet[®] software to write to the Device Object Identifier property of the Device Object. Refer to Appendix A for additional detail.

Setting the MS/TP Baud Rate

The Tri-Stat is shipped from the factory for BACnet[®] operation with a baud rate of 76,800bps. The baud rate can be changed to 38,400, 19,200 or 9,600bps. Changes can be accomplished remotely over the network using BACnet[®] Analog Value AV4 (Table A3), or locally at the Tri-Stat by using internal DIP Switch SW1 as follows:

1. Record the currently assigned MAC Address (SW1 switches 1 through 7 - See Figure 7).
2. Set the desired baud rate using Address Switches 1 through 4 as shown in Figure 8.

Baud Rate Selection

SW1 DIP Switches 1-4

ADDRESS DIP Switch Number/Position								MS/TP
1	2	3	4	5	6	7	8	Baud Rate
on	off	off	off	X	X	X	X	76,800
off	on	off	off	X	X	X	X	38,400
off	off	on	off	X	X	X	X	19,200
off	off	off	on	X	X	X	X	9,600

Only SW1 Switches 1 through 4 are used to set the Baud Rate - See text for detail.

Figure 8. Baud Rate Selection Settings

3. Set DIP Switch 8 to the ON position. Allow a short delay (approximately 20 seconds) for the new baud rate to be recognized.
4. Restore DIP Switch 8 to the OFF position.
5. Restore DIP switches 1-7 to the MAC address recorded in step 1.

Restoring Factory Default Settings

The following procedure can be used to restore the factory default settings to the Tri-Stat:

1. If the current MAC Address will be reused, record the currently assigned address (SW1 switches 1 through 7 - see Figure 7).
2. Deactivate 24VAC power to the Tri-Stat.
3. Set all 8 of the DIP switches (1-8) to the ON position.
4. Restore 24VAC power to the Tri-Stat. Allow a short delay (approximately 20 seconds) for the factory default settings to be recognized.
5. Deactivate 24VAC power to the Tri-Stat.
6. Set all 8 of the DIP switches (1-8) to the OFF position.
7. Restore DIP switches 1-7 to the MAC address recorded in step 1.
8. Restore 24VAC power to the Tri-Stat to return it to service with factory default settings.

TRI-STAT MODBUS[®] CONFIGURATION

The Tri-Stat is initially preconfigured at the factory for BACnet[®] network operation. To set the Tri-Stat for Modbus[®] network operation, perform the following steps. Refer to Appendix B - Tri-Stat MODBUS[®] Device Operating Parameters for available register values and settings.

1. The default network address is set at the factory for a value of 2. Any value between 1 and 127 can be assigned for the using Configuration DIP Switch SW1 as previously outlined in the **Setting the MAC Address** paragraph of this document. If the current network address will be reused, record the current settings of DIP switches 1 through 7.
2. With the Tri-Stat powered on, set Configuration DIP switches 1 through 4 to the ON position.
3. Toggle DIP switch 8 ON for 5 seconds, and then back OFF.
4. Restore DIP switches 1-7 to the network address recorded in step 1.
5. The Tri-Stat is now set for Modbus[®] operation with a baud rate of 19,200bps. If necessary, the baud rate can be changed as outlined previously in the **Setting the Baud Rate** paragraph of this document.
6. Configure the necessary Modbus[®] register values as outlined in Appendix B.

TRI-STAT START-UP

The following procedure is intended for initial start up of the instrument.

1. Confirm that the Tri-Stat is installed and wired properly as outlined in **TRI-STAT INSTALLATION** and **TRI-STAT INTER-CONNECTIONS** sections of this document.
2. Confirm that network termination, address, baud rate and device object instance number (as applicable) have all been properly set as outlined previously in the **TRI-STAT BACnet[®] CONFIGURATION** or **TRISTAT MODBUS[®] CONFIGURATION** sections of this document.
3. Apply 24VAC power to the Tri-Stat. After a brief initialization (approximately 20 seconds) observe that the green Activity LED flashes on for 1 second, then OFF for one second indicating normal operation.
4. Install Tri-Stat cover by engaging the small molded hinges at the top of the cover with the base, and gently swinging the cover downward into the closed position. The cover will latch via the tab located at the bottom of the enclosure. If required, install the Security/Tamper resist screw at the bottom of the Tri-Stat enclosure (as shown in Figure 3).
5. Using suitable software, set current Tri-Stat Time (refer to Appendices A and B for BACnet[®] and Modbus[®] network details).
6. Confirm network device settings and operation using Appendices A and B for BACnet[®] and Modbus[®] applications respectively.
6. The Tri-Stat is now ready for normal network operation.

TRI-STAT NORMAL OPERATION

During normal operation of the Tri-Stat, no further user activity is required.

The Tri-Stat features a green "Activity" light emitting diode (LED - see Figure 5) that flashes to indicate the operating status of the instrument. Following application of 24VAC power and a brief instrument initialization of approximately 20 seconds the LED will begin to flash.

During normal Tri-Stat operation the Activity LED will continuously flash ON for 1 second, then OFF for 1 second.

During Tri-Stat fault conditions, the LED will continuously flash ON for 2 seconds, and then OFF for 2 seconds.

Refer to Appendix A and Appendix B for BACnet[®] and Modbus[®] device network values available during operation of the Tri-Stat.

TRI-STAT MAINTENANCE

In most HVAC environments, periodic maintenance and calibration is not required or recommended. If calibration of the CO₂ sensor is required, refer to the applicable procedures that follow for BACnet[®] or Modbus[®] CO₂ Sensor Calibration.

The Tri-Stat features a patented ABC Logic™ (Automatic Background Calibration) CO₂ self-calibration system that virtually eliminates the need for manual calibration in applications where indoor CO₂ level drop to outside ambient conditions (approximately 400 ppm) at least three times in a 14 day period, typically during unoccupied periods. ABC Logic™ ensures that the CO₂ sensor will typically reach its operational accuracy after 25 hours of continuous operation at a condition that it was exposed to ambient reference levels of air at 400 ppm ±10 ppm CO₂. With ABC Logic enabled, the CO₂ sensor will perform to specified accuracy provided that it is exposed to the reference value at least four times in 21 days, and the reference value is the lowest concentration to which the sensor is exposed. All Tri-Stat sensors are set at the factory with the ABC Logic™ self calibration feature turned ON. In facilities that are continuously occupied for 24 hours per day, or where there could be significant sources of non-occupant related CO₂ such as greenhouses, breweries and other industrial and food processing applications, the ABC Logic™ should be turned OFF. Refer to Appendices A and B for the specific BACnet[®] and Modbus[®] network command options to disable the ABC Logic feature.

BACnet[®] CO₂ Sensor Calibration

It is not necessary to recalibrate the CO₂ sensor after installation. The ABC Logic algorithm will begin recording CO₂ data immediately, and after 24 hours will adjust sensor measurements to ensure accurate and consistent readings. If desired, the CO₂ sensor may be calibrated at a single point using a pre-mixed reference CO₂ gas, or using ambient air with CO₂ measured by a reference sensor at CO₂ levels of 0-10,000PPM. Perform calibration in a stable room temperature environment where there are no significant air drafts or temperature variations during the procedure.

CAUTION

A suitable pressure regulator must be provided to ensure that reference gas supply is maintained at 7 PSI. Damage to the CO₂ sensor will occur if excessive pressure is applied to the sensor ports.

1. Ensure that 24VAC power is applied to the Tri-Stat during calibration of the instrument.
2. Set the reference gas regulator adjustment knob to the fully OFF position.
3. Remove the port covers from the Tri-Stat CO₂ calibration ports (Figure 9) and attach suitable tubing from the reference gas regulator to either port.
4. Check all reference gas connections to ensure there are no leaks, and no kinks in the tubing to the Tri-Stat port.
5. Record the current network address of the Tri-Stat (SW1 DIP switches 1-7).
6. Apply 24VAC power to the Tri-Stat and allow it to stabilize.
7. Set DIP switches 1-4 to OFF, and switches 5-8 to the ON position. The Tri-Stat is now in Calibration mode.
8. Set reference gas supply flow ON and ensure that pressure of 7PSI is applied to the Tri-Stat sensor port.
9. Allow the reference gas to flow for 1 minute.
10. Using BACnet[®] software, write the value of the reference gas CO₂ level in PPM to AV5 (Single Point PPM).
11. During the next 3 minutes, as the Tri-Stat continues calibration, observe the Tri-Stat CO₂ AV5 value as follows:
 - a) A -1 value indicates that the new calibration value has been successfully written.
 - b) A -2 value indicates that calibration has been accomplished successfully.
 - c) A -3 value indicates that calibration was not successful. If this occurs, restart the calibration procedure at step 9.
12. After the calibration has been completed successfully, restore the network address settings at DIP switches 1-7 to the values recorded in Step 5, and then, set switch 8 to the OFF position to restore Tri-Stat normal operation.

This completes BACnet[®] CO₂ sensor calibration for the Tri-Stat.

Modbus[®] CO2 Sensor Calibration

Calibration of the CO2 sensor in a Modbus[®] network environment is the same as described for BACnet[®] however use suitable Modbus[®] software to permit access and modification of register 30023 (CO2 Sensor Calibration 2-byte register value).

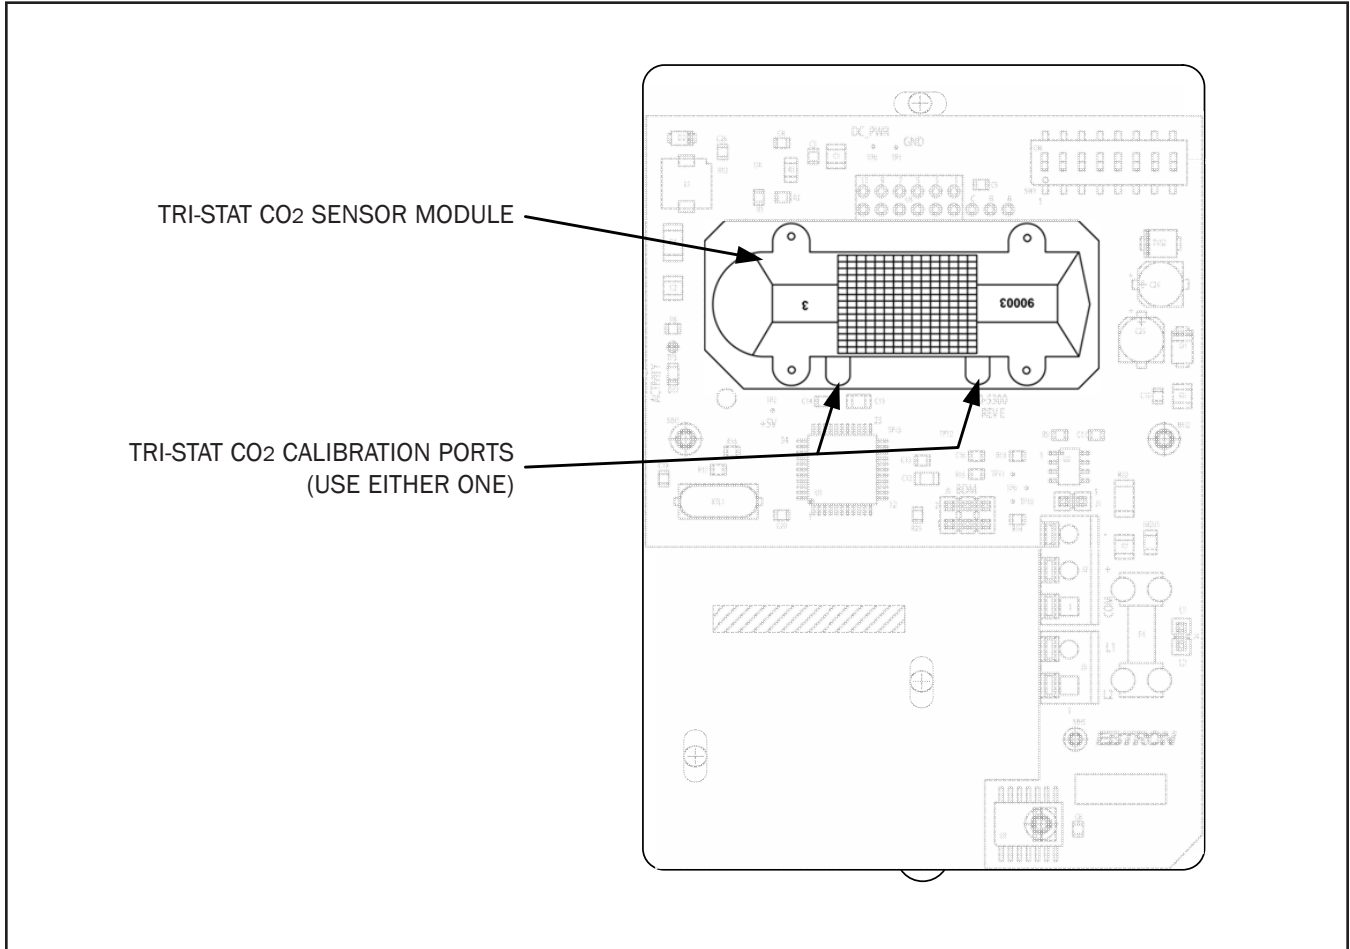


Figure 9. Tri-Stat CO2 Calibration Ports

BACnet[®] NETWORK DEVICE OPERATING PARAMETERS

Appendix A contains a detailed listing of all Tri-Stat BACnet[®] network variables and values.

MODBUS[®] NETWORK DEVICE OPERATING PARAMETERS

Appendix B contains a detailed listing of all Tri-Stat Modbus[®] network variables and values.

TRI-STAT STANDARD LIMITED PARTS WARRANTY

If any **EBTRON** product fails within 36 months from shipment (12 months for the CO2 module), **EBTRON** will repair/replace the device free of charge as described in the company's warranty contained in **EBTRON**'s Terms and Conditions of Sale. Defective equipment shall be shipped back to **EBTRON**, freight pre-paid, for analysis.

TM TRI-STAT_B.1A

APPENDIX A - BACnet[®] NETWORK DEVICE OPERATING PARAMETERS

TRI-STAT BACNET[®] OVERVIEW

There are a total of 20 BACnet[®] objects associated with the Tri-Stat. These objects permit display of current values, configuration of the Tri-Stat, and calibration of the CO₂ sensor. There are five BACnet[®] object categories for the Tri-Stat (below) that are described in the following paragraphs.

- BACnet[®] Device Object
- BACnet[®] Analog Input (AI) Objects
- BACnet[®] Analog Value (AV) Objects
- BACnet[®] Binary Value Objects

BACnet[®] Device Object

The device object allows configuration of the Tri-Stat. Object properties can be specified as shown in Table A1.

Table A1. BACnet[®] Device Object

BACnet [®] Object	Description
Tri-Stat	This object allows the operator to specify the following: Device name Device location Time and Date Universal Time Coordinated Offset APDU properties MS/TP properties Object Identifier

BACnet[®] Analog Input (AI) Objects

The analog input BACnet[®] objects permit display of the present values for the items detailed in Table A2. In addition, analog input change of value (AI COV) subscriptions for these objects can be configured as follows:

AI COV: A confirmed or unconfirmed COV (Change of Value) notification can be subscribed to for each analog input object (below). The COV increment value can be set through each AI.

Table A2. BACnet[®] Analog Input (AI) Objects

BACnet [®] Object	Default Present-Value	Range	Description
CO ₂ PPM (AI1)	Display Only	NA	Displays the present value of CO ₂ in parts per million.
RH (AI2)	Display Only	NA	Displays the present value of relative humidity in percent.
Temperature (AI3)	Display Only	NA	Displays the present value of ambient room temperature in degrees F (can be changed to degrees C if desired).
Lowest PPM (AI4)	Display Only	NA	Displays the lowest CO ₂ PPM value for the past 24 hour period. Any value written to this object will reset the lowest CO ₂ PPM to the present reading.

TM, TRI-STAT, PLE

BACnet[®] Analog Value Objects

The analog value BACnet[®] objects allow for configuration of variables that affect instrument operation and individual sensor measurement accuracy.

Table A3. BACnet[®] Analog Value Objects

BACnet [®] Object	Default Present-Value	Range	Description
Elevation (AV1)	0 feet	0-5000 feet	This object allows specifying the elevation that the Tri-Stat is installed in feet above sea level.
CO2 Sample Rate (AV2)	10 seconds	1-600 seconds	This register specifies how often the CO2 sensor is sampled in seconds.
Baud Rate (AV3)	76,800	Optional	This object allows specifying the RS485 Baud rate.
Single Point PPM (AV4)	-1	0 to 10000 ppm	This object allows calibration of the CO2 sensor.
ABC Logic Status (AV5)	1	Either 1 or 2	Writing a '1' to this will turn the ABC Logic™ on, writing a 2 will turn it off. This data is non-volatile and saved by the CO2 module.
CO2 Gain (AV6)	1	0 - 100	This object allows specifying a gain to the raw CO2 sensor reading or to the Ebtron factory calibration gain adjustment setting.
Relative Humidity Gain (AV7)	1	0 - 100	This object allows specifying a gain to the raw Relative Humidity sensor reading or to the Ebtron factory calibration gain adjustment setting.
Temperature Gain (AV8)	1	0 - 100	This object allows specifying a gain to raw Temperature sensor reading or to the Ebtron factory calibration gain adjustment setting.
CO2 Offset (AV9)	0	+/-10,000	This object allows specifying an offset to raw CO2 sensor reading or to the Ebtron factory calibration offset adjustment setting.
Relative Humidity Offset (AV10)	0	+/-100	This object allows specifying an offset to raw Relative Humidity sensor reading or to the Ebtron factory calibration offset adjustment setting.
Temperature Offset (AV11)	0	+/-200	This object allows specifying an offset to raw Temperature sensor reading or to the Ebtron factory calibration offset adjustment setting.

TM TRI-STAT_R1E

BACnet[®] Binary Value Objects

The binary value BACnet[®] objects allow for application of the Ebtron factory calibration values for individual sensor gain and offset factors.

Table A4. BACnet[®] Binary Value Objects

BACnet [®] Object	Default Present-Value	Range	Description
Factory CO2 Gain/Offset Status (BV1)	Active	Active/ Inactive	When this object is set to Active, the CO2 sensor will operate with the Ebtron factory calibration values for gain and offset.
Factory Relative Humidity Gain/Offset Status (BV2)	Active	Active/ Inactive	When this object is set to Active, the Relative Humidity sensor will operate with the Ebtron factory calibration values for gain and offset.
Factory Temperature Gain/Offset Status (BV3)	Active	Active/ Inactive	When this object is set to Active, the Temperature sensor will operate with the Ebtron factory calibration values for gain and offset.

APPENDIX B - MODBUS[®] NETWORK DEVICE OPERATING PARAMETERS

Tri-Stat Modbus[®] Register Overview

There are a total of 31 Modbus[®] registers associated with the Tri-Stat. These registers permit display of current values, configuration of the device, and calibration of the CO₂ sensor. They are grouped into the following categories:

- 6 read-only registers consisting of three 4-byte floats (high word/low word) detailed in Table B2.
- 14 read/write registers consisting of seven 4-byte floats (high word/low word) detailed in Table B3.
- 11 read/write 2-byte registers detailed in Table B4.

Table B1 identifies the Tri-Stat supported standard Modbus[®] command functions.

Table B1. Tri-Stat Supported Standard Modbus[®] Command Functions

Command	Description
04	Read input registers (refer to Tables B2 through B4).
06	Write registers (refer to Tables B2 through B4).
16	Write multiple registers (refer to Tables B2 through B4).

Modbus[®] 4-Byte Floats - Read Only Properties

The 4-byte floats with read only properties permit display of each of the three sensors values in the Tri-Stat as detailed in Table B2.

Table B2. Modbus[®] 4-Byte Floats - Read-Only Properties

Name	Address	Default Register Value	Range	Description
Present CO ₂ PPM	30001 - 30002	Display Only	NA	These paired registers contain the present CO ₂ parts per million.
Present Relative Humidity	30003 - 30004	Display Only	NA	These paired registers contain the present relative humidity percentage.
Present Temperature	30005 - 30006	Display Only	NA	These paired registers contain the present ambient room temperature in degrees F.

TM, TRI-STAT, R1A

Modbus[®] 4-Byte Floats - Read/Write Properties

The 4-byte floats with read and write properties detailed in Table B3 allow the configuration of gain and offset variables that affect the measurement accuracy of the three sensors.

Table B3. Modbus[®] 4-Byte Floats - Read/Write Properties

Name	Address	Default Register Value	Range	Description
Lowest CO2PPM	30007 - 30008	Present Value	Any Value	These paired registers allow the display of (or change to) the lowest CO2PPM value in the past 24 hour period. Any value written to this object will reset the Lowest CO2 PPM to the Present CO2 PPM value.
CO2 Gain	30009 - 30010	1	0 - 100	These paired registers allow specifying a gain value to the raw CO2 sensor reading or to the Ebtron factory gain adjustment setting.
Relative Humidity Gain	30011 - 30012	1	0 - 100	These paired registers allow specifying a gain value to the raw Relative Humidity sensor reading or to the Ebtron factory gain adjustment setting.
Temperature Gain	30013 - 30014	1	0 - 100	These paired registers allow specifying a gain value to the raw Temperature sensor reading or to the Ebtron factory gain adjustment setting.
CO2 Offset	30015 - 30016	0	+/-10,000	These paired registers allow specifying an offset value to the raw CO2 sensor reading or to the Ebtron factory offset adjustment setting.
Relative Humidity Offset	30017 - 30018	0	+/-100	These paired registers allow specifying an offset value to the raw Relative Humidity sensor reading or to the Ebtron factory offset adjustment setting.
Temperature Offset	30019 - 30020	0	+/-200	These paired registers allow specifying an offset value to the raw Temperature sensor reading or to the Ebtron factory offset adjustment setting.

Modbus[®] 2-Byte Registers - Read/Write Properties

The 2-byte registers with read and write properties detailed in Table B4 allow configuration of the variables that affect the accuracy of the three sensors.

Table B4. Modbus[®] 2-Byte Registers - Read/Write Properties

Name	Address	Default Register Value	Range	Description
Elevation of Tri-Stat	30021	0 feet	0-5000 feet	This register allows specifying the elevation that the Tri-Stat is installed in feet above sea level.
CO2 Sample Rate	30022	10 seconds	1-600 seconds	This register specifies how often the CO2 sensor is sampled in seconds.
CO2 Sensor Calibration	30023	-1	0 to 10000 ppm	This register allows calibration of the CO2 sensor.
CO2 Sensor ABC Logic Disable	30024	1	Either 1 or 2	Writing a 1 to this register will turn the ABC Logic™ on; writing a 2 will turn it off. This data is non-volatile and is saved by the CO2 module.
Tri-Stat Time: Hours	30025	0	0 - 23	This register allows setting the current hour of time.
Tri-Stat Time: Minutes	30026	0	0 - 59	This register allows setting the current minute of time.
Float Invert	30027	0	0 or 1	This register allows change to the order of register that is read or written first in the 4-byte floats. When this register is set to 0 (default) the high word is read or written first; when it is set to 1 the low word is read or written first.
Factory CO2 Gain/Offset Status	30028	1	1 or 0	When this register is set to 1 (default) the CO2 sensor will operate with the Ebtron factory gain and offset adjustment. When this register is set to 0, the CO2 sensor will operate without the Ebtron factory gain and offset adjustment.
Factory Relative Humidity Gain/Offset Status	30029	1	1 or 0	When this register is set to 1 (default) the Relative Humidity sensor operates with Ebtron factory gain and offset adjustment. When this register is set to 0, the Relative Humidity sensor operates without Ebtron factory gain and offset adjustment.
Factory Temperature Gain/Offset Status	30030	1	1 or 0	When this register is set to 1 (default) the Temperature sensor operates with Ebtron factory gain and offset adjustment. When this register is set to 0, the Temperature sensor operates without Ebtron factory gain and offset adjustment.
Temperature Units of Measurement	30031	0	0 or 1	This register allows setting the temperature measurement units of register 30005/30006 to Fahrenheit or Celsius. When this register is set to 0 (default) the unit of temperature measurement is Fahrenheit. When set to 1, the unit of temperature measurement is Celsius.

TM TRI-STAT_R1E

